

## ELITE SERIES OPEN BACK MOUNTING INSTRUCTIONS

### Wall Mount:

- With a stud finder, find the position of the studs in the drywall and mark their location
- Determine the optimal placement for the Elite Case, based upon your desired aesthetic look
- Remove the front grille from the case
- Using the pilot holes located inside the case on the top and bottom, drive 4 screws and washers (2 top, 2 bottom) making sure to hit the marked stud locations
- Use the cable management notch to run the power cable and optical/ethernet cables if applicable
- **Never run the power cable behind the wall**
- Connect the cables to the back of the Sonos ® Playbar ®
- Place the Sonos ® Playbar ® in the vertical position centered inside the case
- Replace the front grille

## ELITE SERIES CLOSED BACK MOUNTING INSTRUCTIONS

### WALL MOUNT:

- With a stud finder, find the position of the studs in the drywall and mark their location
- Determine the optimal placement for the Elite Case, based upon your desired aesthetic look
- Remove the front grille from the case
- Drive 4 screws inside the case (2 towards the top, 2 towards the bottom) making sure to hit the marked stud locations
- Use the cable management notch to run the power cable and optical/ethernet cables if applicable
- **Never run the power cable behind the wall**
- Connect the cables to the back of the Sonos ® Playbar ®
- Place the Sonos ® Playbar ® in the vertical position centered inside the case
- Replace the front grille

### BRACKET MOUNT:

- Follow instructions associated with the mounting bracket
- Remove the front grille from the case
- Mount the brackets securely to the back of the case using appropriate hardware
- Use the cable management notch to run the power cable and optical/Ethernet cables if applicable
- **Never run the power cable behind the wall**
- Connect the cables to the back of the Sonos ® Playbar ®
- Place the Sonos ® Playbar ® in the vertical position centered inside the case
- Replace the front grille